




## Scottotoiler: Aprilia Falco SL 1000 1999 - 2005 Installation Guide for Aprilia Falco SL 1000 1999 - 2005

Note: The HCR (sold separately) is not compatible with this model, we recommend the Lube Tube instead



Locate the vacuum – There is a rubber bung over a spigot on the inlet tract. Remove this bung and then press the Damper Elbow, part number 4, onto the spigot. For further information see our easy step installation guide - [Vacuum Connectors, General](#).

See picture below left

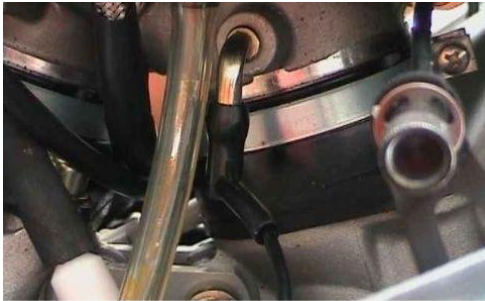


The RMV can be mounted under the seat. The more vertical the RMV the better and remember to avoid exhaust and engine components. For further information, see our easy step installation guide – [RMV Positions, General](#).

See third picture



The Dispenser Assembly can be routed along the Swingarm using Dispenser Mounting Sleeves & Glue and secured to the paddock stand bobbin mount using a cut down Dispenser Plate & Clip, parts 19 & 20. For further information see our easy step installation guide - [Dispenser Assemblies, General](#). The nib should feed the rear sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards.

See picture bottom left

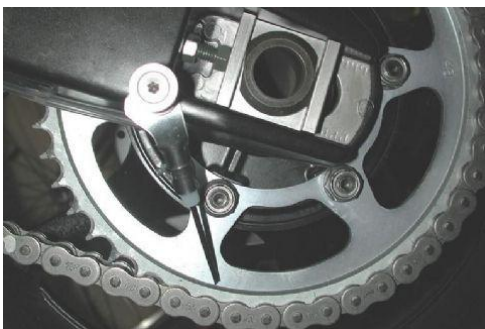

Note: Picture shows a similar Swingarm

Once fitted, [fill and prime the system](#) and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email [technical@scottoiler.com](mailto:technical@scottoiler.com) for assistance. Thank you.

Scottotoiler Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 [www.scottoiler.com](http://www.scottoiler.com)

